









	STOP	Stop
	FOR HER BACK	For Her Back Wash
	FOR HER FRONT	For Her Front Wash
	FOR HIS BACK	For His Back Wash
	DRYER	When selected, a light will show on the control panel which can be controlled by the + or - buttons.
	OSCILLATE	Pressing any of these buttons a second time will automatically oscillate the nozzle back and forth for a wider wash. Pressing it once more will stop the oscillation.
	ENERGY SAVER	Pressing Energy Saving on or off activates or deactivates the Energy Saving mode.
	WATER DRYER	The water pressure and dryer temperature can be adjusted up to 5 levels.
	NOZZLE POSITION	The oscillating mode and nozzle position can be adjusted up to 5 levels.
	WATER	The water temperature can be adjusted up to 4 levels.
	SEAT	The seat's temperature can be adjusted up to 4 levels.